

PIMA

FOR BETTER PROTECTION

HUNTER-PRO 32

Intruder Alarm System

User Manual



PIMA Electronic Systems Ltd.

5 Hatzoref Street, Holon 58856, Israel

☎ +972-3-5587722

☎ +972-3-5500442

✉ support@pima-alarms.com

🌐 <http://www.pima-alarms.com>

PIMA Electronic Systems Ltd. does not represent that its Product may not be compromised and/or circumvented, or that the Product will prevent any death, personal and/or bodily injury and/or damage to property resulting from burglary, robbery, fire or otherwise, or that the Product will in all cases provide adequate warning or protection. The User understands that a properly installed and maintained equipment may only reduce the risk of events such as burglary, robbery, and fire without warning, but it is not insurance or a guarantee that such will not occur or that there will be no death, personal damage and/or damage to property as a result.

PIMA Electronic Systems Ltd. shall have no liability for any death, personal and/or bodily injury and/or damage to property or other loss whether direct, indirect, incidental, consequential or otherwise, based on a claim that the Product failed to function.

Warning: The user should follow the installation and operation instructions and among other things test the Product and the whole system at least once a week. For various reasons, including, but not limited to, changes in environment conditions, electric or electronic disruptions and tampering, the Product may not perform as expected. The user is advised to take all necessary precautions for his/her safety and the protection of his/her property.

This document may not be duplicated, circulated, altered, modified, translated, reduced to any form or otherwise changed; unless PIMA's prior written consent is granted.

All efforts have been made to ensure that the content of this manual is accurate. Pima retains the right to modify this manual or any part thereof, from time to time, without serving any prior notice of such modification.

Please read this manual in its entirety before attempting to program or operate your system. Should you misunderstand any part of this manual, please contact the supplier or installer of this system.

Copyright © 2004 by PIMA Electronic Systems Ltd. All rights reserved. You can contact us at: PIMA Electronic Systems Ltd., 5 Hatzoref St., Holon 58856, Israel. <http://www.pima-alarms.com>


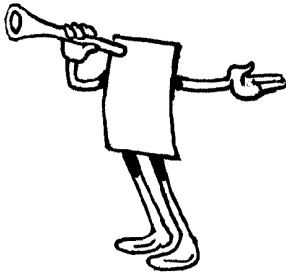


TABLE OF CONTENTS

CHAPTER 1: INTRODUCTION	4
1.1 Main Features HUNTER-PRO 32	5
1.2 Safety Precautions	5
1.3 Signs and Abbreviations Key	6
CHAPTER 2: KEYPADS	7
2.1 Display Screen	8
2.2 Keys' Function	10
2.3 Entering User Menu.....	11
CHAPTER 3: ARMING & DISARMING THE SYSTEM	13
3.1 Arming/Disarming via Keypad	14
3.2 Arming/Disarming with Remote Control	16
3.3 Arming/Disarming with Key.....	17
3.4 Automatic Arming	17
3.5 Disarming the System	19
3.6 Remote Control via Touch-tone Phone	20
CHAPTER 4: PROGRAMMING AND OPERATION.....	22
4.1 Programming Codes	22
4.2 Programming Time and Date	31
4.3 Private Dialer Telephone Numbers	31
4.4 Chime	33
4.5 Alarm	34
4.6 Panic.....	35
4.7 Smoke and Fire Detectors Alarm	35
4.8 System Tests	35
4.9 Canceling Keypad Buzzer	36
4.10 Bypassing Zones.....	36
4.11 Memory Log	36
4.12 System Display Types	38
CHAPTER 5: TROUBLESHOOTING.....	40

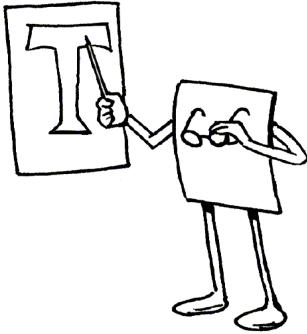

CHAPTER 1: INTRODUCTION

Congratulations on your purchase of the HUNTER-PRO 32 Intruder Alarm System! Much care has been taken in developing the HUNTER-PRO Intruder alarm system, which will provide you with unprecedented peace of mind. The HUNTER-PRO user-friendly operation and advanced features will professionally protect your home or business.

HUNTER-PRO 32 Intruder Alarm System contains numerous features that allow it to befit the customer's individual needs, and yet remain easy to program and use both by the customer and the technician. Therefore, it is important to read this manual from cover to cover in order to familiarize yourself with the system and take full advantage of its features. To assure optimal safety and security, you should test the HUNTER-PRO 32 Intruder Alarm System once a week.

For any further questions, please do not hesitate to contact your local **PIMA** distributor or **PIMA** directly at:

PIMA Electronic Systems Ltd.

Tel.: +972-3-558 7722

Fax: +972-3-550 0442

Email: support@pima-alarms.com

Up to date literature is available to download from our website:
www.pima-alarms.com

1.1 Main Features HUNTER-PRO 32

- ★ 8 to 32 zones with wireless add-on, local, and remote bus expanders
- ★ Supports a wide range of partition options:
 - Up to 16 partitions each with its own Account ID and Users
 - Up to 8 subsystems each with different keypads, IDs, etc.
- ★ Full supervision data of wireless detectors (life signal, low battery, fault)
- ★ Comprehensive Zone Tests for flawless installation: Walk Test, Soak Test, etc.
- ★ Two options for viewing system status:
 - "PIMA" Style: Status of all 32 zones is displayed simultaneously
 - Detailed: Scrolling events, zones' and system's status
- ★ Four Subscriber dialing numbers with optional voice message
- ★ Four Monitoring Stations phone numbers
- ★ PIMA unique Integrated Digital Communicator (telephone, long-range radio)
- ★ Supports split and double reporting with different account IDs
- ★ LCD keypad with multilingual Menu-Driven screens for easy programming and operation
- ★ Many alternatives for easy programming (Keypad, Fast Programmer, Local/Remote download software)
- ★ Up to 28 user codes with various authorization levels
- ★ Easy and user friendly operation with single key operation
- ★ Various accessories (microphone, voice unit etc.)
- ★ Memory Log up to 410 events (100 are non-volatile)
- ★ Automatic Arming at a preset time and/or after a preset silence time
- ★ System remote control via any touchtone telephone

1.2 Safety Precautions

Your Hunter alarm system has been registered with the CE in accordance with EN 60950 of its rules. The CE requires us to tell you the following information:

- ★ To reduce the risk of fire or electric shock, do not expose this alarm system to rain or moisture.
- ★ Do not open the door of the alarm system. Dangerous high voltages are present inside of the enclosure. Refer servicing to qualified personnel only.
- ★ This alarm system should be used with AC 230V, 50Hz. To prevent electric shocks and fire hazards, do NOT use any other power source.
- ★ Do not spill liquid of any kind onto the unit. If liquid is accidentally spilled onto the unit, immediately consult a qualified service.
- ★ Install this product in a protected location where no one can trip over any line or power cord. Protect cords from damage or abrasion.
- ★ Disconnect all sources of power supply before proceeding with the installation.
- ★ Connect the AC wires to the terminal block on the PCB as marking. Pay attention to polarity.

1.3 Signs and Abbreviations Key



Regular key press



Long key press, until confirmation beep is heard




Press this key at any programming stage in order to return to root screen

Default Master Code: 5555

Enabled User Code: A code enabled, by Master Code, to enter User Menus

LCD Zone Numbers: Referring to the frame of zones engraved above and below the LCD display window, indicating the zones' numbers.

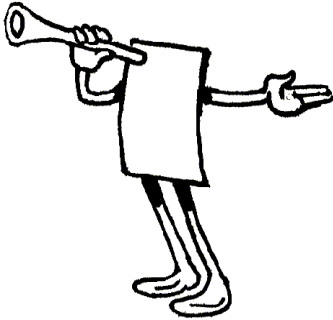


CHAPTER 2: KEYPADS

HUNTER-PRO 32 works with PIMA's LCD keypads: RXN-400 and RXN-410, especially designed for maximum simplicity, durability and decorative design. The keypad is used for arming, disarming and programming the system as well as displaying time and date, system status information, events and defaults, memory log and more.

Both keypad models are identical, except for the size of the display screen:

- ★ RXN-410: Large screen 23 x 97 mm
- ★ RXN-400: Small screen 15 x 60 mm
- ★ Up to eight keypads can be connected to the system

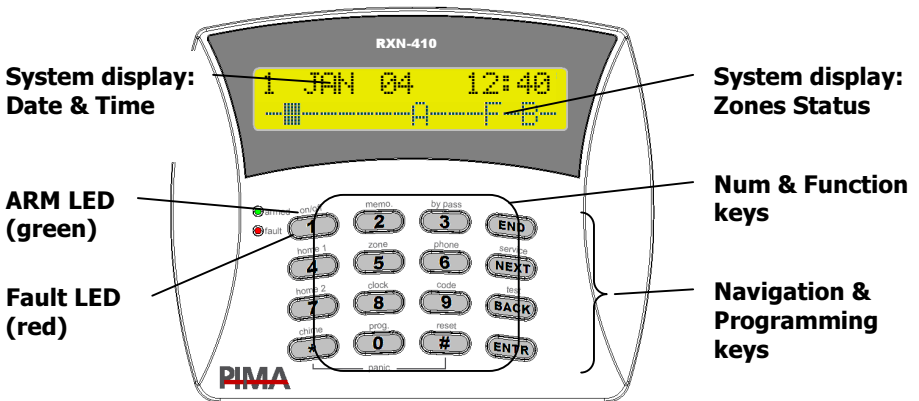


2.1 Display Screen

The display screen has two lines with 16 characters each. The upper line displays the time and the date. The lower line displays data regarding the system, such as events, faults and zone status.

The user can choose between two display types: scrolling (fast zone display) and PIMA display:

2.1.1 Scrolling

The zone and event screens automatically interchange and display their status in a chronological order.

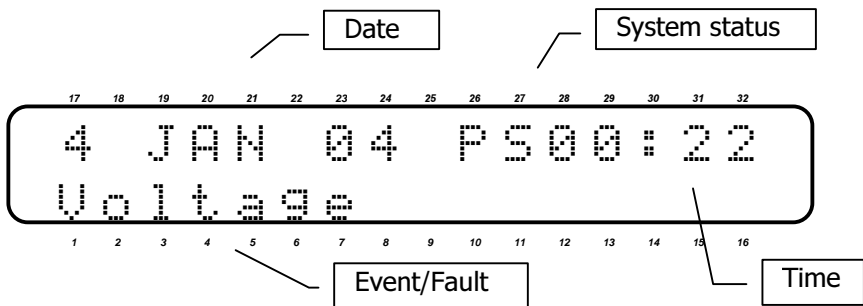

Upper Line Display


- ★ Time and date
- ★ System status displayed between time and date:
 - P System communicating or testing PSTN line
 - S Siren ON
 - R Relay ON
 - T System reporting to Monitoring Station via radio transmitter

Lower Line Display

- ★ Events and faults
- ★ Opened zones (OF)

2.1.2 PIMA Display

All events and zones displayed in a single screen using signs and abbreviations

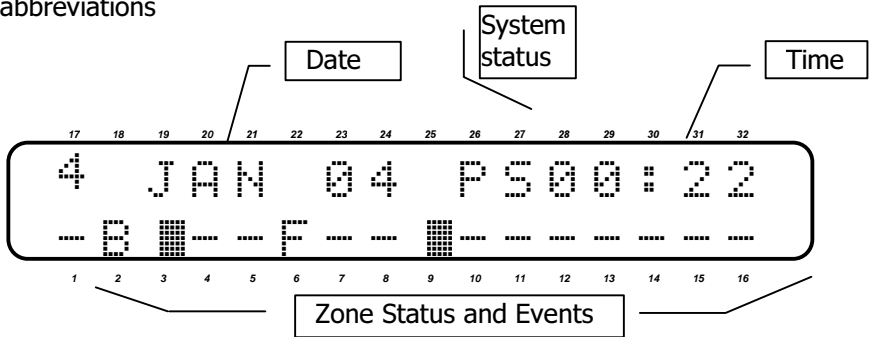

Upper Line Display

Time and date if system has 16 or less zones. If more, upper line displays data like the lower line.

Lower Line Display

The following signs appear above (or below when in upper line) the zone number/partitions that encircle the LCD screen:

- Closed zone
- Opened zone
- B Bypassed zone
- A Alarm zone (zone triggering alarm)
- C Chime zone
- S Shortcut zone (zone was shortcut)
- F Failed zone (disconnected)/Tamper event (in a wireless detector)
- L Low battery in wireless detector
- V Supervision signal: Wireless detector did not report test to system





**NOTE:**

If technician selected PIMA display, the system will not display the zone status during faults. Only after faults resolved, PIMA Display renews.

2.2 Keys' Function

Operating and programming the system commences by first entering the Master Code and then pressing any further required keys. However, a number of keys enable certain actions by a single long press, without the Master Code:

Key	Function	
	After entering Master Code (short press)	Secondary Function (long press)
<small>ON/OFF</small> 1	System Arming/Disarming	Fast arming the system (if enabled by technician)
<small>MEMO.</small> 2	Display arming, alarm, and fault histories	-
<small>BYPASS</small> 3	Temporary bypass of zones	-
<small>HOME 1</small> 4	Arming the system to mode "Home 1" (partial arming)	Fast arming the system to "Home 1" mode (if enabled by technician)
<small>ZONE</small> 5	Display menu (see section "Zone Status Display")	-
<small>PHONE</small> 6	Programming telephone numbers	-
<small>HOME 2</small> 7	Arming the system to mode "Home 2" (partial arming)	Fast arming the system to "Home 2" mode (if enabled by technician)
<small>CLOCK</small> 8	Programming time and date	-
<small>CODE</small> 9	Programming the user codes	-
<small>CHIME</small> *	Programming zones for Chime feature	Enabling/Disabling the Chime feature
<small>PROG.</small> 0	Programming automatic arming	-
<small>RESET</small> #	Programming key	Smoke detector reset

	Programming key	-
	Programming key	Display service Provider information
	<ul style="list-style-type: none"> ▪ Programming key ▪ Test siren, battery, AC, and tel. line 	-
	Programming key	Display system's name and version

2.3 Entering User Menu

 
In order to program and change data in the user level, you must first enter the User Menu. User Menu can be fully accessed by the system administrator (owner) when using the Master Code.

Other users can also access the User Menu but are limited to the number of available functions according to their authorization level programmed by the system administrator (owner).

To learn more about authorization levels and how to change them see "Programming Codes" on page 22

2.3.1 Entering User Menu with Master Code

To access the User Menu:




2.3.2 Entering User Menu with User Code


If user is enabled by technician to enter the User Menu:



If user is not enabled by technician to enter the User Menu (i.e., User Code arms/disarms the system), the menu can still be accessed as follows:

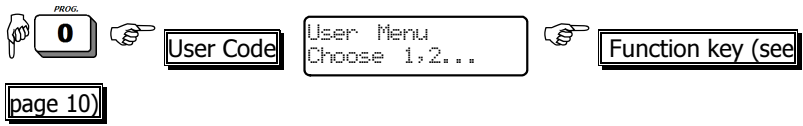

 When user selects a function (i.e., the corresponding key is pressed) that he or she does not authorized to, the system displays the following:





CHAPTER 3: ARMING & DISARMING THE SYSTEM

The system can be armed and disarmed using one of four methods:

- ★ Keypad
- ★ Remote control or key
- ★ Automatically (arming only)
- ★ Remotely via telephone

As a rule, the system should be armed **ONLY** when all zones (but those on the exit route) are closed and there are no faults (e.g., battery, mains, etc.) and/or events (e.g., fire, panic, etc.). It is possible to arm the system with open zones but these zones should be bypassed for the system to be armed (see "Arming with Open Zones" on page 14).



IMPORTANT!

When a zone is bypassed, it will **NOT** produce an alarm in case an intruder will be detected at that zone.

The technician should enable the option to auto-bypass open zones when the system is armed remotely (remote control, key, or via the phone) or when the system is auto-armed. If not enabled, the system will not arm with open zones.



 
IMPORTANT!

When automatic-bypass is enabled, you will have **NO** indication when arming the system remotely.

3.1 Arming/Disarming via Keypad

3.1.1 System Messages During Arming

3.1.1.1 Arming with Closed Zones (normal arming)

Before arming the system, make sure all zones (except exit delayed zones – usually zones on exit route) are closed: make sure that in the keypad display above/below all the LCD zones numbers there is not a  sign blinking or an opened zone indication.

The system can be activated using one of the following codes:
Master Code, User Code, and Short Code.

After entering one of these codes, the green control LED shall begins to blink, a beep will be heard from the keypad, and the display will show the exit delay message:

```
Arming...
Exit Delay 25
```

At the end of the exit delay, the green control LED shall stop to blink and stay on, the beep will stop, and the display will show the following message: "System Set" and then change to the following display (example):

```
1 JAN 04 20:05
```

3.1.1.2 Arming with Open Zone(s)



When activating the system with one or more opened zones (that are not on the exit route, i.e., exit delayed zones), the keypad will produce a fast-beep and the display will show:


```
Open Zone! Press
OP:TOM ROOM
```

...


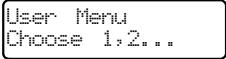

```
Bypass or END
OP:FRONT DOOR
```


Scrolling line: Open Zones & Events

To bypass open zones:   open zones are bypassed & system armed

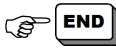To cancel arming:  **END** system returns to normal operation mode

3.1.2 Arming with Master Code

 **Master Code** ...  

 **NOTE:**
The system's default Master Code is: **5555**


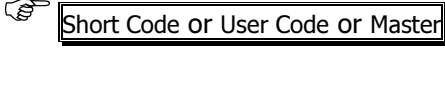
3.1.3 Fast arming with User Code and/or Short Code


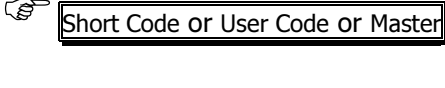
Pressing the code shall arm the system immediately:




 **Short Code**

 **User Code**

3.1.4 Arming the System to HOME state



Arming to "HOME 1":  


Arming to "HOME 2":  

 **NOTE:**
After long pressing the HOME key (i.e.  or ) and entering the short/user/master code, the following message is displayed: HOME 1 or HOME 2 according to the pressed key

3.1.5 Fast Arming

To quickly arm the system, if enabled by technician:


 **Full Arming:** 

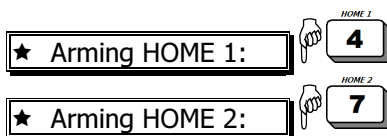**NOTE:**


Exit delays in HOME 1 and HOME 2 can be disabled by technician.

3.1.6 Arming via the User Menu

 If user is enabled by technician to enter the User Menu:



 If user is not enabled by technician to enter the User Menu, it can still be accessed as follows:

**3.2 Arming/Disarming with Remote Control**

Optional feature.

REM-3 remote control has three buttons: arming, disarming, and HOME 1. Turn to the technician in order to install this feature.

**NOTE:**

REM-3 is only available for HUNTER-PRO with wireless add-on system.

The remote is a Code-Hopping type (i.e., the code is changed with each operation and thus prevents "code stealing") with a key holder for carrying with ones keys.

**ARM:**

To arm the alarm system, press the GREEN button on the remote control.

DISARM:

To disarm the alarm system, press the RED button on the remote control.

HOME MODE:

To arm the alarm system in a Home Mode, press the BLUE button.

PANIC:

To send a panic signal to the alarm system, press the BLUE and GREEN buttons together for 3 seconds.

**NOTE:**

It is possible for the technician to program the system to produce a short beep when the system is armed with the remote control. Doing so, the user can also get indication if the remote control's battery is low.

3.3 Arming/Disarming with Key

HUNTER-PRO 32 can be armed/disarmed with a key. Turn to the technician in order to install this feature.

**NOTE:**

It is possible for the technician to program the system to produce a short and beep when the system is armed with the key.

3.4 Automatic Arming

The system can be automatically armed with one of the following two options: 1. At a preset time; 2. After no-detection period.

At the preset time or after no-detection period, the system will commence auto-arming unless it was armed before that time. This feature is valid for all weekdays.

The system can detect movement in the protected area via its connected detectors and sensors, therefore, it can identify no-movement hence there is no one in the protected area.

 
When the system starts auto-arming, the display will show "Automatic Arming" and a 45 seconds 'warning countdown' will start, indicating the arming countdown is to follow. Note that during the 'warning countdown' the keypad will beep. During the 'warning countdown', any disarming code can cancel the auto-arming process.

After the 'warning countdown' is over, the system will begin regular arming process, including exit delay and a beep from the keypad.

3.4.1 Programming Auto-Arming at Preset time




-OR-




The following screen will appear:

```
Automatic Arming
ENTER/NEXT/END
```

Press  and move to the next screen:


```
Automatic Arming
XX:XX
```

Enter  **Time in which the system will be armed**

 


NOTE:


To cancel Auto-Arming, the Automatic Arming programming needs to be repeated, and the time to be set as 00:00.

Press  to save programming and move to the next screen.

3.4.2 Programming Auto-Arming after no-detection period



-OR-

 


In the following screen, enter the no-detection period (in minutes) that after which the system commence auto-arming:



Press  to save programming and move to the next screen.

3.5 Disarming the System

 3.5.1 Disarming the System with Master Code




3.5.2 Disarming the System with User Code




Entering the code will immediately disarm the system.

 -OR-



-OR-

 **NOTE:**

If the system does not turn to Disarm state, make sure that the time is included in the preset time frame that enables disarming the system (see section "Programming User Codes")

3.6 Remote Control via Touch-tone Phone

The alarm system can be remote-controlled via any touch-tone telephone, including cellular phone. The system can be controlled from the moment there is communication between the system and the telephone, whether the system called the telephone, or when initiated by the user as following described:

1. Dial the telephone number the system is connected to
2. Wait for the system's confirmation tone (a long tone followed with two beeps)
3. Enter Master Code (note **NOT** to enter the code before the end of the confirmation tone)
4. Wait a few seconds until the alarm system confirms its status, using one of the two following tones:

————— Continuous tone: System disarmed

..... beep System armed

**NOTE:**

The system will not identify commands from the telephone while sounding the confirmation tone. It is important to wait until the confirmation tone is over before pressing the telephone keys that control the system.

5. Execute command by pressing a key on the phone.
The following table includes system's commands by phone keys:


<u>Phone key:</u>	<u>Function:</u>
1	Arm the system
2	Disarm the system
4	Arm the system in "Home 1" mode
5	Switch on the Relay
6	Switch off the Relay
7	Arm the system in "Home 2" mode
8	Listen in (only available with a MIC-100)
0	Disables siren and dialer (in case of an alarm).



NOTE:
The alarm system confirms the command was received by two short beeps.

While the system and the telephone are communicating, the following message will display on all connected keypads:
"Other keypad in use".


If the system does not receive any command for a period of 60 seconds, it shall disconnect and return regular operation mode. The system will remain in standby (with the above displayed on keypads) for another 60 seconds before keypad operation returns.

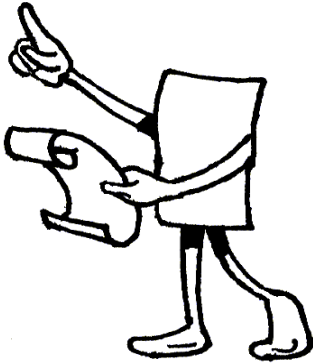

CHAPTER 4: PROGRAMMING AND OPERATION

4.1 Programming Codes

A code is a combination of numbers that allows programming, arming, disarming the system and more. During the programming process, the keypad's display will show the name of the code you want to program. At any stage of the programming, it is possible to

return to the main menu by pressing the  key.



IMPORTANT!

Pay attention that HUNTER-PRO 32 has a code-control feature that does not allow entering identical codes. For example, if one of the user (or master) codes is programmed as 1010, any attempt to program a new code as 1010 or starting with 1111 (e.g., 10101, 10102, 10103, etc.) will display an error message.

4.1.1 Programming Master Code

The default Master Code is: **5555**.


The Master Code can ONLY be changed with the master code.

The Master Code is used for accessing memory and programming different function as described further. It is also possible to arm and disarm the system with the Master Code.



IMPORTANT!

Pay attention that the code need to be between 4 and 6 digits:

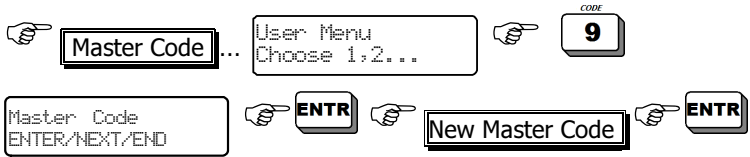

IMPORTANT!
For better protection, change the default code after installation.

4.1.2 Programming Users

The User Codes are mainly for arming and disarming, but depending on the user's authorization level, the user can also go into the User Menu and perform various tasks as viewing memory changing other users settings, program telephone numbers, etc.

HUNTER-PRO 32 holds up to 24 different User Codes, 4 to 6 digits each.

See "Entering User Menu" on page 11 for a description on how to access the User Menu with User Code.



NOTE:

- A name can be programmed for each user, a time frame in which he will be active, allocation to one partition or more as well as limiting authorizations.
- User Code is a number of 4 to 6 digits.

 


-OR-




The following screen will appear:





-OR-

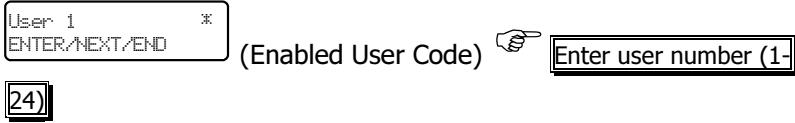



NOTE:

An asterisk (*) placed to the right of the user's name means that the user is already defined in the system.

Following are the different options with user programming

4.1.2.1 Changing (adding new) User Code

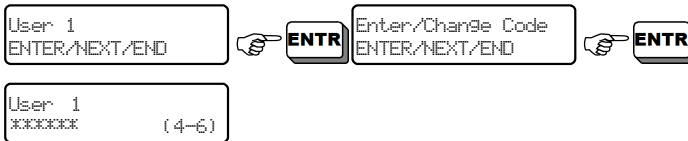


Enter a new User Code (4 to 6 digits) and press  to save.


4.1.2.2 Deleting User



IMPORTANT!

After pressing , all user settings will be deleted!


4.1.2.3 Entering User Name

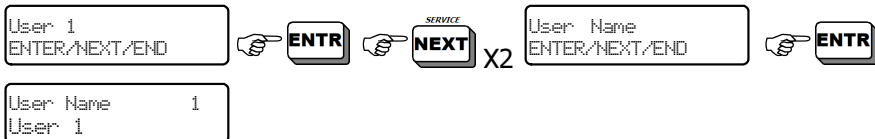





You are now ready to enter text.

How to Select and Enter Characters?

Each numeric code-entry key has characters associated with it the same as with standard cell phone letters. The number of key depressions you make determines which character is selected, e.g.









 
 


 
 


the numeric key  represents 'MNO6'. To select 'M', press the key once; to select 'O', press the key three times. See below for all keys and their associated characters.

- ★ Pressing the  key: moves the cursor forward one character
- ★ Pressing the  key: moves the cursor backwards one character
- ★ Pressing the  key: saves the data
- ★ Pressing the  key deletes a character (number/letter) as well as a whole user name.












NOTE:

- User Name includes up to 8 characters (letters or digits)
- Each arming/disarming will enter the memory along with the user name, date and time (see section "Memory Display" on page 36)
- The order of the ABC letters is identical to that in a cellular phone

. , ? ! 1 <small>ON/OFF</small> 	ABC 2 <small>MEMO.</small> 	DEF 3 <small>BYPASS</small> 	Cancel 
GHI 4 <small>HOME 1</small> 	JKL 5 <small>ZONE</small> 	MNO 6 <small>PHONE</small> 	Next char. 
PQRS 7 <small>HOME 2</small> 	TUV 8 <small>CLOCK</small> 	WXYZ 9 <small>CODE</small> 	Prev. char. 
() / * : - + # <small>CHIME</small> 	0 <small>PROG.</small> 	# <small>RESET</small> 	Save 





The following example illustrates key depressions for the word '7PIR'.

Character	Key Pressed	 Depressions	Follow Key
7		5	
P		1	
I		3	
R		3	

4.1.2.4 Modifying User Access



NOTE:


- To scroll on Access Bar, use  and  keys.
- Marking a "+" under a parameter's letter authorizes the user to program this parameter. Marking a "-" denies this possibility.
- In order to change the mark from "-" to "+" (and vice versa) press .
- To save data press .

User Access Bar (parameter letters)

- U** + User can program User Codes; *(default)*
- User Code programming is disabled
- T** + User can program phone numbers; *(default)*
- Phone numbers programming is disabled
- C** + User can program time and date; *(default)*
- Time and date programming is disabled


- M** + User can view the Memory Log;
 - User cannot view Memory Log (*default*)
- B** + User can bypass zones;
 - User cannot bypass zones (*default*)
- K** + User can operate partition via any keypad (when using partitions);
 - User can operate partition ONLY via designated keypad (*default*)
- A** + User can program auto-arming parameter;
 - User cannot program auto-arming (*default*)

4.1.2.5 Programming User's Disarming Window

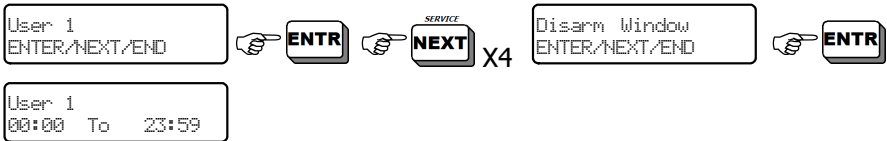

This feature sets the time frame (start and end time) in which the user can disarm the system. By default, the user time is not limited (i.e., start: 00:00; end: 23:59).

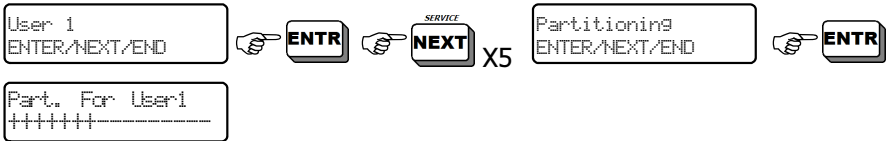


4.1.2.6 Programming User Partitions



This feature links a user to a partition(s). When creating subsystems, there is also a keypad linked to each split (done by the technician), therefore the user can only arm/disarm and view the linked partition using the designated keypad. When a user is required to control partitions using any keypad, the option "K" on the authorization bar should be set to '+'.


With standard system installation, i.e. no partitions, all users are assigned by default to all partitions.

**NOTE:**



 
- To scroll on User Partitions Bar use  and  keys.
- Marking a "+" above a partition allocates it to the user. Marking a "-" denies this possibility.
- In order to change the mark from "-" to "+" (and vice versa) press the  key.
- There is no limitation in the number of partitions allocated to a user.


4.1.3 Programming Short Code

This two-digit code is only used to arm the system.

**-OR-**

 The following screen will appear:

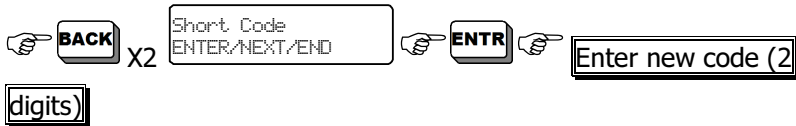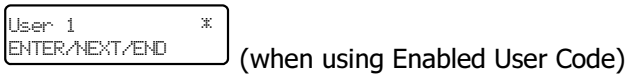**-OR-**

 
Press  a number of times unit exiting to time/zone screen

4.1.4 Programming Duress Code


This code is useful when the system is connected to a security station. The Duress code will disarm the system (if armed) and trigger the Silent Alarm, sending a duress signal to the security station without activating the sirens. Note the code is between 4 to 6 digits:





-OR-



The following screen will appear:

 

-OR-

 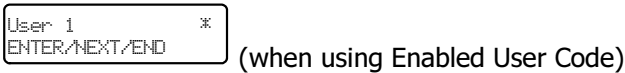

Press **END** a number of times unit exiting to time/zone screen

4.1.5 Programming Door Code

Arms and disarms a system's relay. Useful for opening and closing electric gates, activating video cameras, and more. The code can be

used manually (directly pressed on keypad) and remotely via telephone (see section 3.6 "Remote Controlling via Telephone").

**NOTE:**

- Each entering of a Relay Code changes the relay's status (ON to OFF and vice versa).
- When the relay is ON, the letter "R" appears on the display, left to the time.
- The relay is activated for a preset time programmed by the technician.
- The Code is between 4 to 6 digits.



Master Code /Enabled User Code

User Menu
Choose 1,2...



CODE

9

-OR-

PROG.
0



User Code

User Menu
Choose 1,2...



CODE
9

The following screen will appear:

Master Code
ENTER/NEXT/END

(when using Master Code)

-OR-

User 1 *
ENTER/NEXT/END

(when using Enabled User Code)



BACK

Relay Code
ENTER/NEXT/END



ENTR



Enter new code (4 to 6 digits)



ENTR

to save new relay code

Press **END** a number of times unit exiting to time/zone screen

4.2 Programming Time and Date

Time and date are constantly displayed on screen, used for the User Code's time frames and are included in the system's memory log.


It is crucial that the time and date remain accurate, especially for the memory log, which is crucial for the technician visits.



-OR-



The following screen will appear:

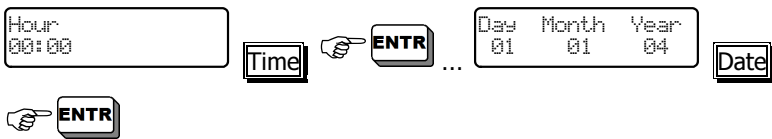

NOTE:

- Enter time in 24:00 (HH:MM) format and date in day/month/year format
- The system will not accept meaningless data, such as 25:25 time. In such a case a fault message will appear. To correct, press the

END

key and enter time again.

4.3 Private Dialer Telephone Numbers

HUNTER-PRO 32 system has four private dialer telephone numbers.

The dialer will dial each phone number in two sets (i.e. total of 8 attempts) and trigger an alarm warning sound, when the call is 'picked'. After the warning sound is over, the system awaits for remote-controlled commands that can be transmitted via the telephone used by the system. The system shall hang-up after a

minute of not receiving any command (see "Remote Control via Touch-tone Phone" on page 20).

**NOTE:**


In case a Voice-Unit is connected to the system, once the call is picked-up, there is a recorded message, and not a warning sound.


The dialer aborts the dialing attempts in the following cases:

- ★ The system's status changes from ON to OFF
- ★ A "Stop Siren/Dialer" command was received via telephone. The first Private Dialer User that gives an 'abort' command causes the other Private Dialer Users in the phone list will not receive the system's report.
- ★ All Private Dialer Telephone Numbers were dialed to twice

4.3.1 Programming Telephones

It is possible to combine the process of Entering/Deleting/Changing programmed telephone numbers once in the Telephone Menu.

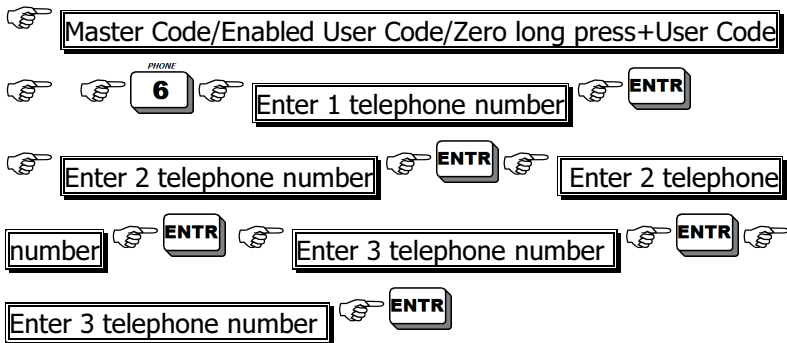4.3.1.1 Programming User's Authorizations**4.1.1.1 Deleting a Programmed Telephone Number**

To delete a programmed telephone number, press the  key instead of the telephone number.

4.4 Chime

Programming the "Chime" feature enables to control opening/closing doors and windows by activating the keypad's buzzer for two seconds each time a door/window is opened. This feature is especially useful when there are small children in the house, or in shops.



 
NOTE:

The "Chime" feature is only enables when system is disarmed.

4.4.1 Programming Chime Zone



Master Code/Enabled User Code/Zero long press+User Code



Enter zone no: 1
Rel.-# Con.-ENTR



Enter zone

number



to confirm or



to release.

On the display the letter "C" shall appear above/below the zone programmed to trigger the chime, and the screen will move to the next zone.


Press **END**

a number of times unit exiting to time/zone screen

4.4.2 Temporary Cancellation of Chime

Temporary cancellation of chime is valid for all zones:



Press and hold the  key to enable/disable the chime feature according to the state in which the system is in; the display will show one of the following messages:

★ Chime Active


★ Chime Disables

4.5 Alarm

There are two possibilities for displaying the name and number of the zone/s that triggers the alarm at the time of an alarm. The technician sets the default display.

★ PIMA Display


All the zones and their status appear simultaneously in a single screen (see section 2.2 "PIMA Display"). Example:

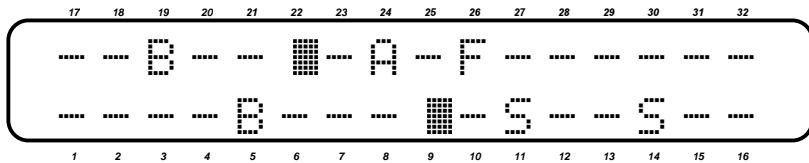

★ Scrolling Display

The name and number of the zone/s that triggered the alarm will appear separately, each in a different screen, in an automatic successive manner. The display will repeat itself for a few minutes, until it will return to the regular screen of an activated system.



In addition, the system will commence other actions according to the zones' programmed features at time of alarm, such as dialing private telephone numbers, disabling siren ("silent alarm"), dialing monitoring station and more. Example:

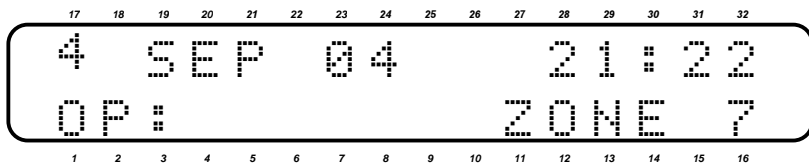

NOTE:

The zone names are programmed only by the technician.

 4.6 Panic

To activate panic, press and hold simultaneously the  and  keys for two seconds.



NOTE:


You can customize your system's response to a panic event, for example, calling the Monitoring Station or your private telephone number, activate a relay (video camera), activate siren, etc. Consult your installer about programming the appropriate Panic Response for your needs.

4.6.1 Panic Button



(Optional feature) Pressing the button triggers sirens and send a panic signal to monitoring station and/or dial to private telephone number (according to technician programming).

4.7 Smoke and Fire Detectors Alarm

In case an alarm is triggered due to smoke/fire detectors, press and hold the  key (until a confirmation sound) in order to reset and release the detector.

4.8 System Tests

This feature tests that the back-up battery, siren and telephone line are in order.



NOTE:

The battery's status can be tested only when the system is connected to mains power source.



Master Code/Enabled User Code/Zero long press+User Code



BACK

Follow the test process displayed on the screen in case fault messages appear.

4.9 Canceling Keypad Buzzer

The keypad produces a variety of sounds at times of pressing a key, confirming a long-press, during countdown, disarming the system, and so on.

Simultaneously pressing the **END** and **ENTR** keys activates/cancels this feature.



NOTE:


When the buzzer is cancelled no sounds will be produced from the keypad.

4.10 Bypassing Zones

This feature is used for temporary bypassing of zone/s, for example in case of a fault.



Master Code/Enabled User Code/Zero long press+User Code

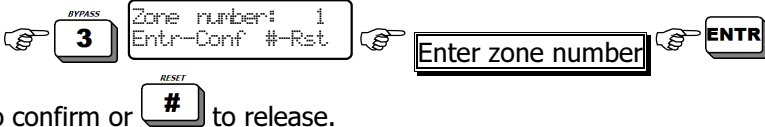

In PIMA Display, the letter "B" will appear above/below the bypassed zone/s, and display will continue to the next screen.

Press **END** a number of times unit exiting to time/zone screen

4.11 Memory Log

The system memorizes up to past 410 events and operations in a chronological order.

4.11.1 Accessing Memory Log Manually

☞ Master Code/Enabled User Code/Zero long press + User Code


☞ ☞ MEMO. 2 ☞ scroll events using **NEXT** and **BACK**.

Press **CHIME *** to jump 10 events in one key-press.

4.11.2 Memory Log Display


Arming and disarming are memorized with the name of the code that initiated them, along with any bypassed zones present at the time. The list of the bypassed zones is presented before those of the arming. Automatic armings are also memorized.

Example 1:

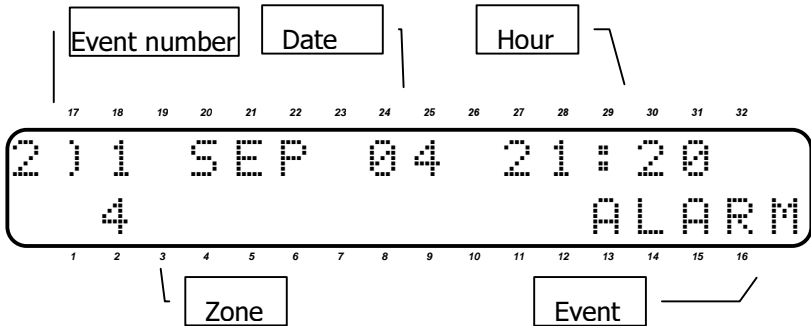


Note that at a time of an alarm, in addition to the screen above, automatically appears another screen with the zone's name (e.g. in this example, the following screen will show "Front Door").

Example 2:

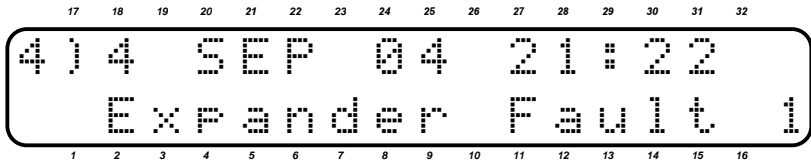

Example 3:

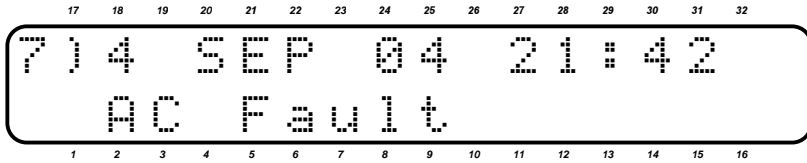


4.12 System Display Types


HUNTER-PRO 32 has two possible system displays:

- ★ **PIMA Display:** All the zones and their status appear in a single screen
- ★ **Scrolling Display:** A detailed description of the zones and their status, each zone in a different screen, and automatically appearing one after the other.

In order to choose display type:

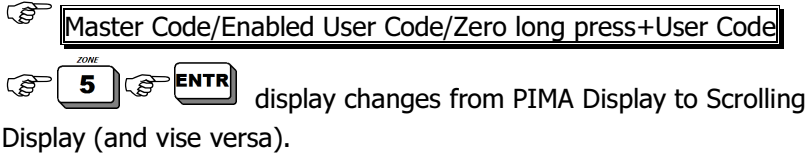



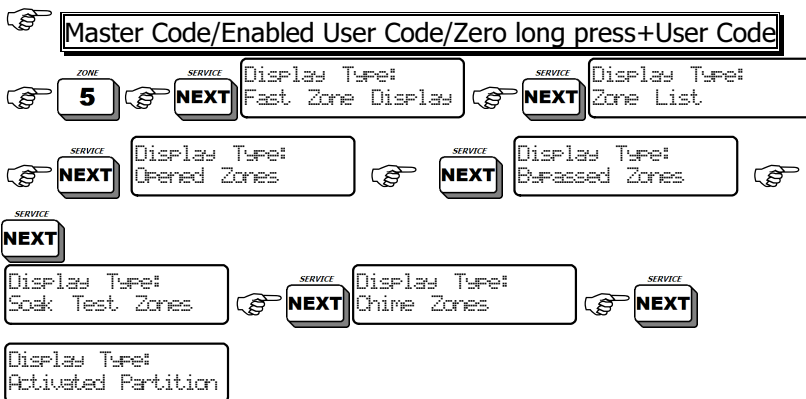


4.12.1 Zone Status Display





IMPORTANT!

- Pressing  in "Zone List"/"Opened Zones"/"Bypassed Zones"/"Soak Test Zones"/"Chime Zones" screens gives a detailed description of the zones in this category.
- Pressing  in "Activated Partitions" screen gives the detailed description on the zones in this category in the following manner:
Partitions marked by an "X": Activated
Partitions marked by an "-" : Not Activated
- In order to scroll between zones in the same category, use the  and  keys.

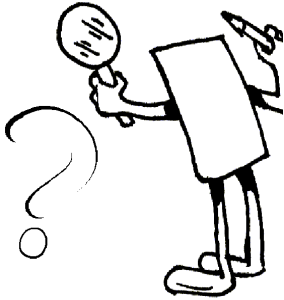

CHAPTER 5: TROUBLESHOOTING

G



NOTE:

If more than one failure is detected, the display will scroll the failure list one after the other. If more than one keypad is connected to the HUNTER-PRO, and you are programming the system from one keypad, then the display on all other keypad will display: `Other Keypad in Use`. This will also be displayed whenever the installer uses a modem in order to program the HUNTER-PRO, or when someone is in control of the HUNTER-PRO via telephone.

The following table describes the possible Alarm System Faults:

Displayed Fault	What can I do?
Battery	Wait approximately 24 hours for the indication to disappear. If the fault indication persists longer than one day, the back-up battery should be replaced.
Wireless Receiver	A wireless receiver failure can be the cause of communication failure between the detector and receiver.
AC voltage	Usually appears during a power failure. If other electrical appliances in the house are operating, check the switch or fuse to which the alarm system is connected. If the cause of the fault is unclear, call the installer.

Clock	Appears following a prolonged power failure during which the backup battery was completely discharged. Set time and date (see section 3.8.4)
Phone	Perform "system self-test" (see section 3.6). Verify during the test that other instruments connected to the Alarm System's telephone line (i.e., telephone sets, facsimiles, etc.) are not active. If the fault persists, call the installer.
Tamper 1	Tamper switch 1 is open. Call the installer.
Tamper 2	Tamper switch 2 is open. Call the installer.
Low pwr	Appears before the back-up battery is completely discharged, usually after a prolonged power failure. Follow instruction for low battery failure.
EEPROM	Parameter programming fault. Call the installer.
Zone Trb.	One of the protected zones is faulty. Call the installer.
ROM	Software failure. Call the installer.
RAM	System failure. Call the installer.
Commun.	Failure to communicate with Monitoring Station. Call the installer.
Det. Vltg	Detector power supply. Call the installer.
Keypad not connected	No communication between the keypad and the HUNTER-PRO motherboard. Call the installer.
Other display use	Programming is done from another keypad or system is controlled via telephone.

APPENDIX: user notes

P/N 4410128 Rev. A (June-2004)

